

Lock Fitting and User Guide

Read thoroughly and keep in a safe place


Read the guide thoroughly before fitting and using the lock. Keep the guide in a safe place for later use and to pass on to new users. Should you have any questions regarding installation or use of your Secuyou system, please contact us.

The lock is future-proof and compatible with other products bearing the io-homecontrol logo, e.g. intelligent home management system.

The pack contains:

Remote control (start set)
Remote control holder (start set)
2 x CR2450 batteries (start set)
Lock
Magnet
Magnet holder
2 x AA batteries
4 x one-way screws
Reduction bushing 7/8
Fitting and User Guide


We recommend you fit the lock with the supplied one-way screws to prevent unintentional removal of the handle.

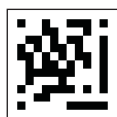


Visit secuyou.dk to see installation demonstration film or SMS "scan" to 1220 and scan the code.

Step 1: Removing handle

1. Close the patio door/window.

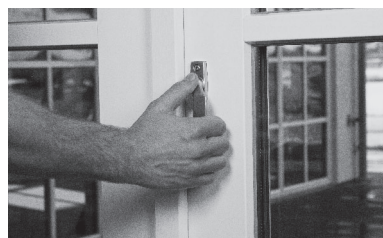

2. Unscrew handle.

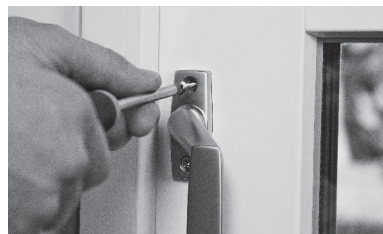


3. Hold handle in closed position.

Step 2: Set handle in lock

1. The spindle is either 7x7 mm or 8x8 mm. If the spindle is 7x7 mm, fit the reduction bushing.



2. Check that the lock is in the closed position (2 triangles point at each other).

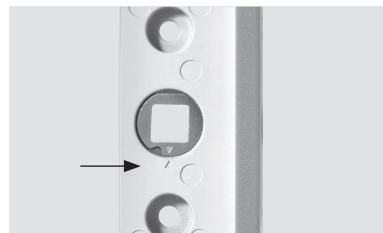

3. Fit the handle to the lock. The control panel on the lock **must** face the pane.



Step 3: Fitting lock and handle

1. Position lock with handle on the patio door/window. As much as possible, use the existing screw holes.




2. **Lightly** tighten handle with two long one-way screws. If the handle has hidden screw fittings, the operating panel on the lock can be removed if required.



2. Adjust position, so that the lock sits evenly against the patio door/window, and securely tighten the two one-way screws.

4. Remove the two buttons on the lock.

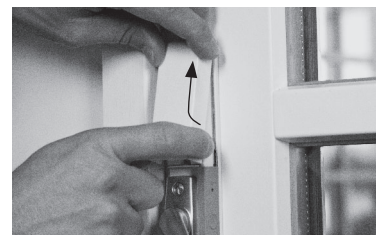

5. Securely tighten the two one-way screws.



Step 4: Fitting the magnet

To fit the magnet to a double patio door go to step 5.

1. Check that the patio door/window is completely closed.
2. Take a cover and place it on the groove on the lock.



3. Push the cover until it touches the frame.




Secuyou ApS
Tel: +45 7020 3003

www.secuyou.dk



4. On the frame, mark with a pencil where the cover's top corner is, when the lock sits to the right side of the frame and mark the cover's bottom corner when the lock sits to the left of the frame. Remove the cover.

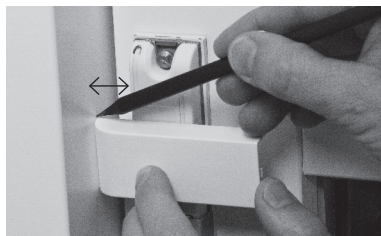

5. Open the patio door/window.

6. If the distance between the lock and the frame is less than 30 mm, drill a Ø10 mm hole in the mark (depth 20 mm).



7. If the distance between the lock and the frame is greater than 30 mm, place the magnet holder on the frame where the cover's top edge points, when the lock sits to the right of the frame, and to the cover's bottom corner when the lock sits to the left of the frame.



8. Press the magnet into the hole or into the magnet holder.



Go to step 6.

Step 5: Fitting the magnet to double patio doors

1. Close the patio door.
2. Take a cover and place it on the groove on the lock.




3. The magnet holder is placed on the patio door opposite the lock in relation to where the cover's top edge points, when the lock sits to the right of the magnet holder, and placed to where the cover's bottom corner points when the lock sits to the left of the magnet holder.



4. Push the cover until it touches the magnet holder.

5. Adjust the magnet holder so that the cover's top corner touches the hole in the magnet holder and always as close to the centre of the hole as possible.

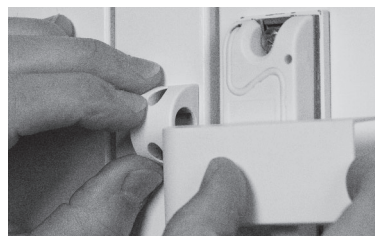

6. Fit the magnet holder with the 2 screws, as close to the lock as possible. The distance can be max. 30 mm.



7. Press the magnet into the hole or into the magnet holder.



Step 6: Check the magnet function

1. Check that the patio door/window is completely closed.
2. Remove the small plastic clip (pull off) to activate batteries.
3. The LED must flash green, indicating the patio door/window is closed.

4. Slowly open the patio door/window until the LED flashes red and check that the patio door/window is in the open position.



5. Close the patio door/window again and check the LED flashes green again.



6. Put the two buttons on.

The lock is now fitted and you can continue with the Remote Control Fitting and User Guide. You can also read how to register the remote control and the lock.


Battery change

1. Pull cover off.
2. Change the 2 AA batteries.

Step 6 of the Remote Control Fitting and User Guide explains how to change the batteries.

Visit secuyou.dk for more details and demonstration films.

SECUYOU

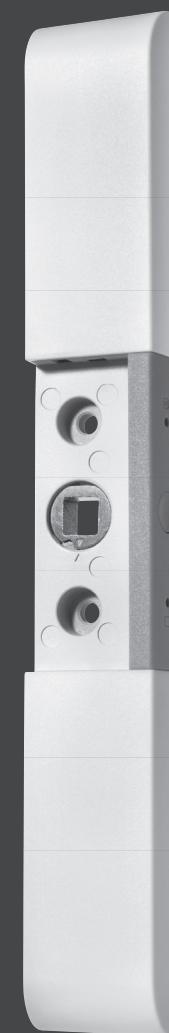

Lock Fitting and User Guide



homecontrol® www.io-homecontrol.com